

0000000JJJJJ #SSSS000000 01 0000 MMDDYY 2400 MMDDYY 0060 06 L 100 ROW 300
 0000 0000 0000 0000 0000 0000 0000 0000 0000 02000000 'FHWA-USA
 'COUNTY 'CITY 'LOCATION

01 01 0001
 01 02 0001 0002
 00 00

First Row:

01 01 0 0100 0010
 01 02 2 0100 0011
 01 01 0 0200 0007
 01 02 2 0200 0006
 01 01 0 0300 0001
 01 02 2 0300 0003
 01 01 0 0400 0007
 01 02 2 0400 0007
 01 01 0 0500 0012
 01 02 2 0500 0011
 01 01 0 0600 0038
 01 02 2 0600 0062
 01 01 0 0700 0055
 01 02 2 0700 0133
 01 01 0 0800 0081
 01 02 2 0800 0136
 01 01 0 0900 0082
 01 02 2 0900 0112
 01 01 0 1000 0080
 01 02 2 1000 0104
 01 01 0 1100 0100
 01 02 2 1100 0085
 01 01 0 1200 0103
 01 02 2 1200 0085
 01 01 0 1300 0083
 01 02 2 1300 0087
 01 01 0 1400 0102
 01 02 2 1400 0103
 01 01 0 1500 0118
 01 02 2 1500 0099
 01 01 0 1600 0153
 01 02 2 1600 0130
 01 01 0 1700 0194
 01 02 2 1700 0130
 01 01 0 1800 0185
 01 02 2 1800 0148
 01 01 0 1900 0118
 01 02 2 1900 0108
 01 01 0 2000 0078
 01 02 2 2000 0075
 01 01 0 2100 0061
 01 02 2 2100 0067
 01 01 0 2200 0065
 01 02 2 2200 0041
 01 01 0 2300 0031
 01 02 2 2300 0042
 01 01 0 2400 0015
 01 02 2 2400 0015
 01 01 0 0100 0012
 01 02 2 0100 0010
 01 01 0 0200 0011
 01 02 2 0200 0002
 01 01 0 0300 0003
 01 02 2 0300 0009
 01 01 0 0400 0006
 01 02 2 0400 0007

0000000JJJJJ = Job Number (12 digits total)
 #SSSS0000000 = Station Number (12 digits total)
 # = 2 for Program, 3 for Special
 0000 = Start Time (4 digits total)
 MMDDYY = Start Date (6 digits total)
 2400 = End Time (4 digits total)
 MMDDYY = End Date (6 digits total)
 0060 = Main Interval (4 digits total)
 L = Total Number of Lanes
 ROW = Total Number of Rows

Second Row:

02000000 = Direction by Lane (8 digits total)
 example: 00220000 = 4 lanes (00=NB, 22=SB)

Fourth Row:

01 = Count Type (1=Volume, 2=Classified)
 01 = Number of Bins
 0001 = Bin #1

Fifth Row:

02 = Total Number of Lanes
 0001 0002 = Lane 1, Lane 2,...

Seventh Row:

01 = Lane Number
 0 = Lane Direction (N=0, E=1, S=2, W=3)
 0100 = First Interval